

Quick Start Guide

In this Quick Start Guide we're going to walk through how to set up the RapidScreen. Right out of the box this unit will already be capable of scanning users and taking their temperatures. Some changes may need to be made to the application based on your individual requirements.

Compatible with the following model: RapidScreen Plus V3 running the Rapidscreen app (and NOT the Face Recognition app)

TABLE OF CONTENTS

Unboxing and Stand Assembly Instruction	2
First Time Setup Notes	3-4
Included In The Box / Mouse Instruction	5
Existing / Closing the Application	6
Connecting to WiFi	7
Changing The Time Zone	8
Volume & Brightness Controls	9
User Manual Notes	10-11
Best Practices	12-13



RAPIDSCREEN STAND ASSEMBLY INSTRUCTIONS

The video on this page demonstrate how to unbox your new device, and assemble with a stand as well as where to put the cables.





IMPORTANT FIRST TIME SETUP NOTES



Step By Step Notes From The Video

Accessing Settings Options

To access the settings menu do a long press & hold at the top left of the screen (or right-click with mouse) at the scanning screen, and then enter the password which by default is 123456

Showing Temperature Results

Go into the General Settings and then into Information Display Settings, turn OFF the Hide Temperature option, save & restart. This way you can see what the device is actually reading someone at which will help you calibrate the device. You can always turn this off afterwards if you don't want the temperature to display during scans.

Explaining The Effective Temperature Setting

If you can't get the device to scan at all then you could go into the Temperature Settings and change the Effective Temperature from 97 to 95, save & restart. This parameter means that anything UNDER that value will be ignored as if not human, though it will prompt about aligning due to sensing motion. Until the device has been calibrated for your location though, it could be erroneously reading people under 97. Once calibrated you should put this back to 97.

Performing The Automatic Calibration

After these steps are done you can go back into the Temperature Settings and then use the Automatic Calibration option. Click the Add button and then set a time range (0:0 to 23:59 for a rule that always active). Put in your current temperature (based off a hand scanner result) as the Target Temperature and then hit Confirm, the scanning screen will come up and then you hit the Start button to begin a 10 second scan. When that scan is complete your new rule will be created and you can save & restart to see that your scans are now accurate.



IMPORTANT FIRST TIME SETUP NOTES CONTINUED

Step By Step Notes From The Video Continued

Turning Off Monocular Live (optional for faster performance)

Go into Face Settings and turn OFF the Monocular Live option, save & restart. This option simply tries to determine if it is a live individual before scanning (rather than a prankster holding up a photo) but it makes the device a lot less responsive so it's best to turn it off.

Turning Off Mask Detection Mode (optional for faster performance)

Go back into Face Settings and turn OFF the Mask Detection mode, if you don't mind the device not prompting to wear a mask. With this setting off the device runs even quicker and is more responsive than normal - people can still wear masks it just won't try to figure out if they are or not. Save & restart the device. * Note this only gives a minor boost to performance.

Additional Notes

Normalizing Temperature Before Scanning

Another important consideration is how cold it is outdoors. Neither this device or any other non-internal thermometer can give a good reading if people are coming in from cold & windy outdoors unless they linger around for a minute or two after coming indoors to normalize their surface temperature.

A Note About Facial / Head Accessories

Also important to remember is that the device needs to identify motion in front of it as a person before it will give a reading, until then it will just say to 'align with the red dot'. This means you need to be aware of too many facial/head accessories such as hats / earmuffs / glasses / scarfs / or masks that have wild patterns or cartoon faces on them. These things can disrupt the device from giving a scan and instead only saying to 'align with the red dot'.

Hood Attachment For Camera

Make sure that you use the hood attachment that comes with the device so that you can shield the camera sensor from overhead lights which will disrupt the camera from performing.

Once these changes are done the device should be far more responsive and reliable.



INCLUDED IN THE BOX

- RapidScreen PLUS v3 Kiosk
- Modular pole stand
- Power cable
- Power extension cable
- Data extension cable
- Data end cable
- Pole top cap
- Attachable camera hood
- Sensor cover plate
- Floor base plate
- Large pole stand nut



This device does have a touchscreen but you can always use a USB mouse if you have one (not provided) as an additional way to access the menus.

MOUSE INSTRUCTIONS



Right Mouse Button

The right mouse button can be used to go to the backend of the application. This will bring up the password prompt (default 123456). Also can be used to go back one level in the menu.



Center Mouse Button

Allows for scrolling long pages



Left Mouse Button

The left mouse button is used to make selections.



EXITING THE APPLICATION

1. By default the device auto launches into our scanning app called RapidScreen. To leave our app and return to the Android home-screen you need to swipe up from the bottom of the screen to expose the Android icons and hit the Circle button:



STARTING THE APPLICATION

- 1. If you've made changes to the android device and need to start the application from the android main screen, select the Application tile.
- 2. Then select the application labeled "RapidScreen"





CONNECTING TO WIFI

- 1. After exiting the application (page 7), on the android main screen click on the settings icon on the screen. This will bring up the android settings for the device.
- 2. At the top, click on the WiFi button.
- 3. Select your WiFi network and enter the password when prompted.
- 4. After connecting to your desired WiFi network, press the right mouse button to go back to the main screen and restart the application.





CHANGING THE TIME ZONE

- 1. Exit the application (page 4)
- 2. Click on the settings icon and scroll down to find Date & Time
- 3. After clicking Date & Time another menu will appear. Turn off the Automatic time zone setting if not already done, then towards the bottom click on Select Time Zone.
- 4. Pick the appropriate location for your time zone and select it.
- 5. Press the right mouse button to exit back to the android main screen and restart the application.

÷	Setting	gs	۹	≡ Date & time
	ψ	USB		Automatic date & time Use network-provided time
		Apps 18 apps installed		Set date 29 September 2020
		ScreenshotSetting		Set time 15:24
	=	Storage 1.33 GB of 8G used		Select time zone GMT-05.00 Central Daylight Time
		Memory Avg 1.8 GB of 1.9 GB memory used		Use 24-hour format
	Persor	nal		
	۰	Location ON / Battery saving		
	ô	Security		
	8	Accounts		
	۲	Languages & input English (Australia)		
	٥	Backup & reset		
	System	n		
	0	Date & time SGMT-05:00 Central Daylight Time		
	*	Accessibility		
	{}	Developer options		
	0	About device Android 7.1.2		
		Other Setting		



٦

VOLUME AND BRIGHTNESS CONTROLS

Screen Brightness – Adjust the screen brightness of the kiosk. Click on the Red Dot and drag to your desired brightness setting.

Screen brightness



Volume Settings – Adjust the Volume setting of the kiosk. Click on the Red Dot and drag to your desired Volume level.

Volume Settings	
	100%

ALTERNATIVE LOUDER SPEAKER OPTION

If your environment requires much louder alerts, we suggest connecting wireless bluetooth speakers to the device, as the device does support wireless connectivity.



User Manual

For more information on the advanced features of the device and also just documentation on the details of various menu options, please refer to the User Manual:



While it is good to read through these sections to get a better understanding of how the device works, it is not necessary unless you run into any issues and want to troubleshoot them.

For even more features you can download and install the eFace management software. This software needs to run on a Windows PC on the same network as your devices so that you can remotely manage them.

You can download the eFace management software here:





User Manual (continued)

Please note that there is an additional document that is the user manual for the eFace software itself.

You can find this user manual for eFace here:



Another important note about eFace is that you should NOT use the Kiosk Settings section of eFace - the default values there are not what the default values of the device are so if you change anything there and push those changes to your device it will break the functionality until the device is recovered.

If you purchased the premium cloud service option for your device then please contact support@spintouch.com and we will get your account created for you.



RapidScreen Thermometer

Stand back approximately 20 inches as indicated by tape strip on the floor

1.



2.



As you approach the device, fill the silhouette with your face/head but do NOT exceed the shape. Leaning in/out helps while maintaining the 20" distance.

The device may ask you to: Please Come Closer. The device will tell you to: Please align forehead with the Red Dot

You may need to move your hair aside and remove hat to line up your forehead with the red dot. Present as much forehead as possible.



The device will also remind you that a mask is required.

3.



4.



When the device measures your temperature and it is below the set threshold, green lights will flash and you will hear:

Thank you, Please Proceed

If the device measures your temperature above the set threshold, red lights will flash, alarm will sound, and you will hear:

Invalid Measurement